


## Small hanging shelf instructions.

1. Take your piece of wood and mark out the component parts of the shelf as shown on the adjacent plan.
2. Carefully cut out each part using a Hand Saw. Use a Coping Saw for the curves.
3. When all the components have been cut out, sand them down with some sand paper to remove any rough surfaces and edges.
4. On the back plate mark out the shelf fixing holes using the measurements given on the diagram opposite. Then drill the holes using a 2mm drill bit.
5. Using a countersunk drill bit, countersink the shelf fixing holes on the back of the Back Plate only.
6. Now fix the Brass Wall hanging plate in the centre of the back plate with the small screw provided.
7. 2mm holes should be drilled into the centre of the back edge of the top and bottom shelves.
8. Align shelves with back plate and put screws provided into shelves from the back of the back plate to fix in place.
9. Paint or varnish your shelf and leave to dry.

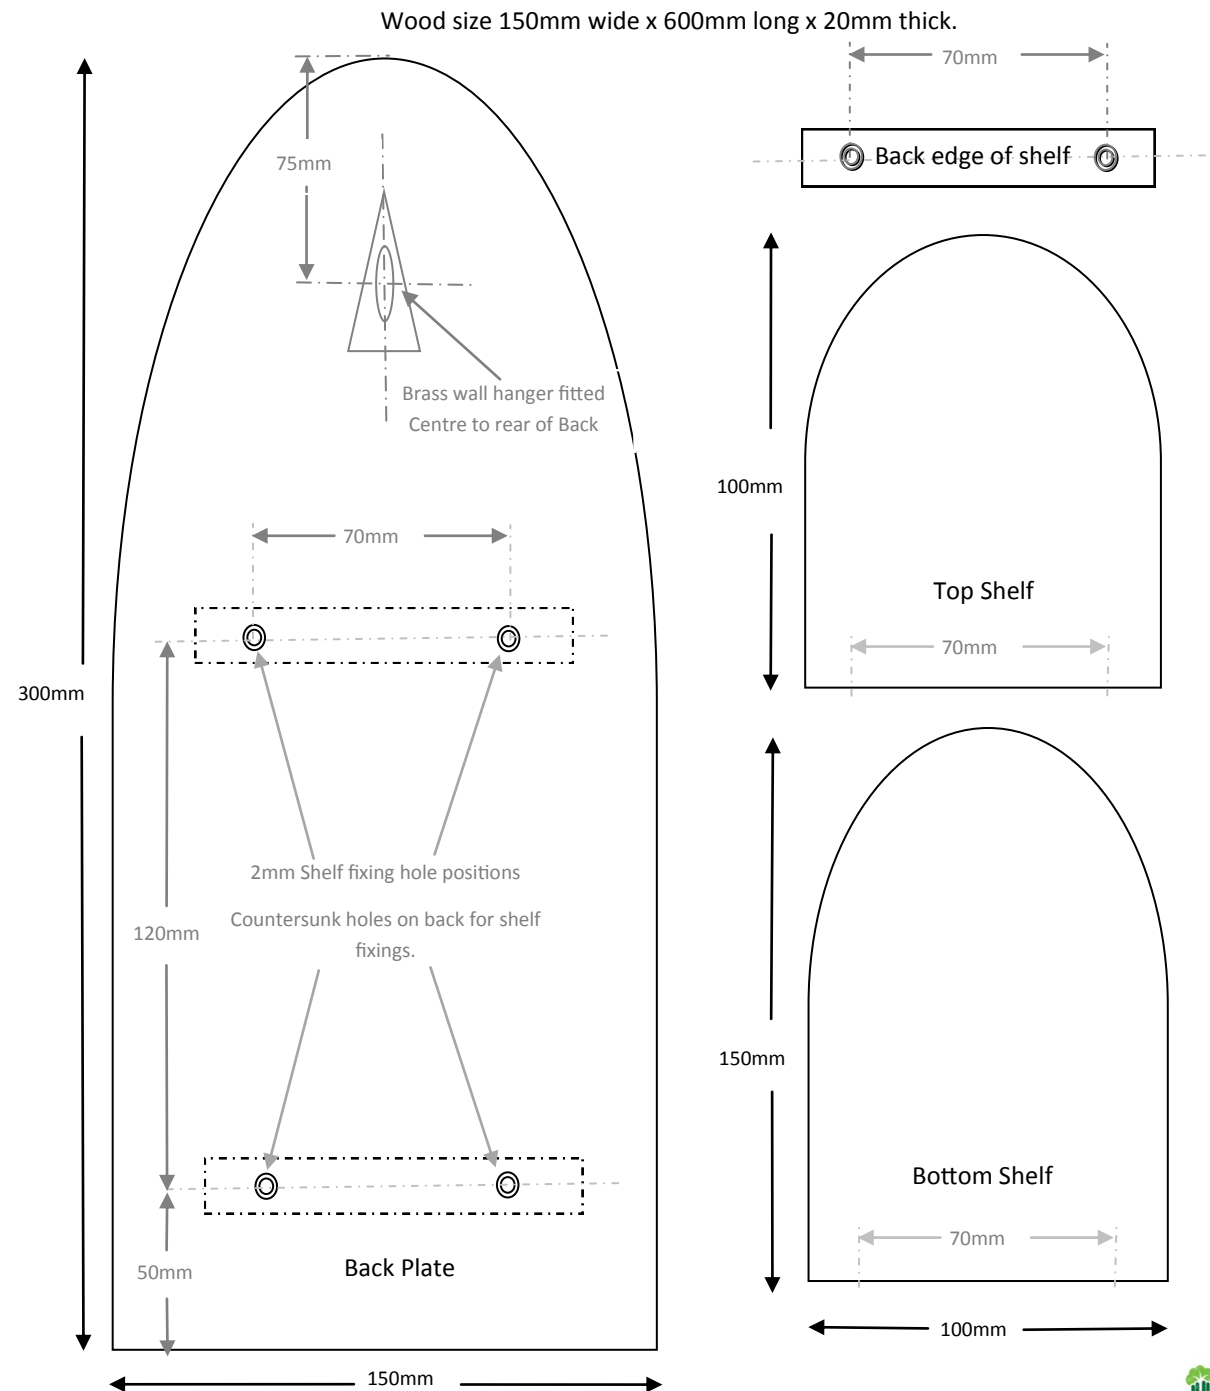

All radiuses are equal to width of each component.

